

Installation Guide

SpeedFace-V3L (Lite)

Version: 1.0

How to install the device?

❖ Installation Environment

Please refer to the following recommendations for installation.



INSTALL INDOORS
ONLY



AVOID INSTALLATION
NEAR
GLASS WINDOWS






AVOID DIRECT
SUNLIGHT
AND EXPOSURE



AVOID USE OF ANY
HEAT SOURCE
NEAR THE DEVICE

❖ Installation on the wall


- ① Attach the mounting template sticker to the wall, and drill holes according to the mounting paper.
- ② Fix the backplate on the wall using wall mounting screws.
- ③ Attach the device to the backplate.
- ④ Fasten the device to the backplate with a security screw.

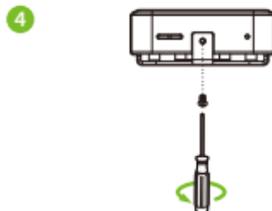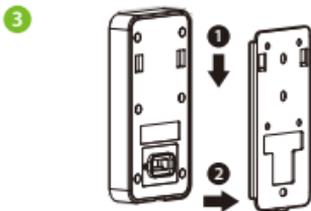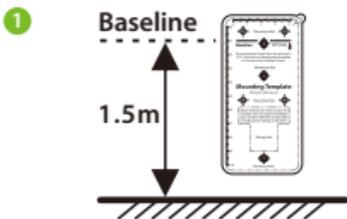


How to connect the device?

Refer to the following wiring to connect the device.


❖ Terminal Block

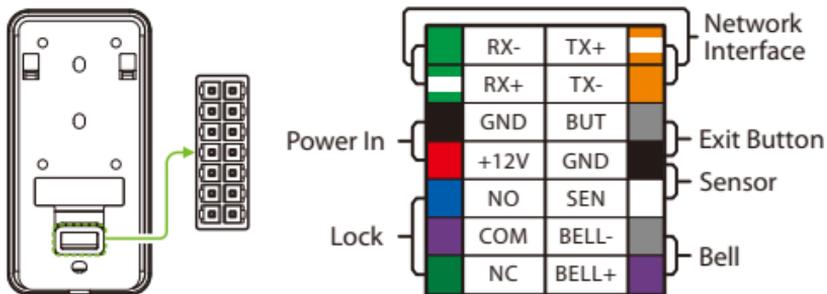

❖ Exit Button, Door Sensor & Bell Connection

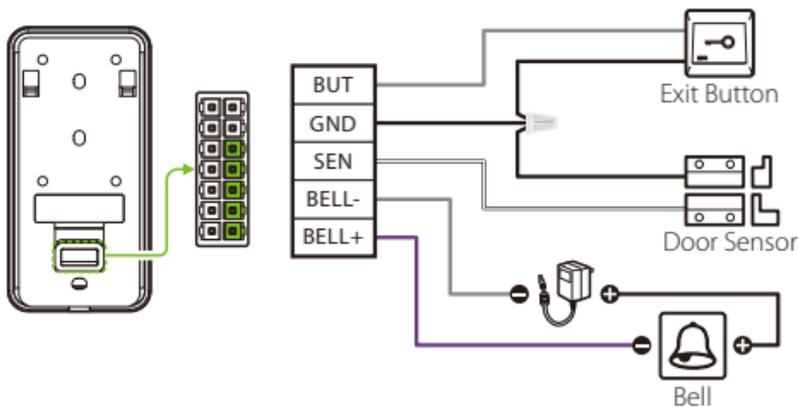


❖ Power Connection

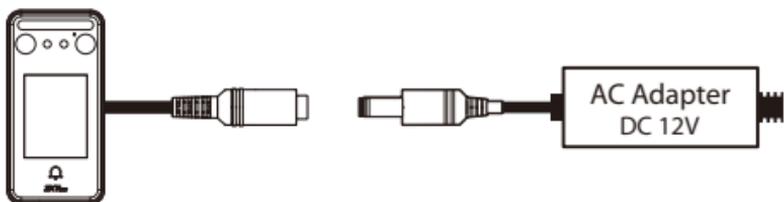

- Recommended AC adapter: **12V ± 10%**, at least **1500mA**.
- Use an AC adapter with a higher current rating to share power with the other devices.

❖ Ethernet Connection

Connect the device and the computer software over an Ethernet cable. As shown in the example below:

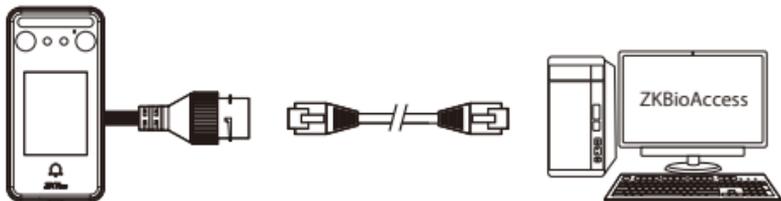

Default IP address: 192.168.**1**.201
Subnet mask: 255.255.255.0

IP address: 192.168.**1**.130
Subnet mask: 255.255.255.0

Click **[COMM.]** > **[Ethernet]** > **[IP Address]** to change the IP address and then click **[OK]**.


Note: In LAN, the IP addresses of the server (PC) and the device must be in the same network segment while connecting to the software.

❖ Lock Relay Connection

The system supports **Normally Opened Lock** and **Normally Closed Lock**. The **NO LOCK** (normally opened at power on) is connected with '**NO**' and '**COM**' terminals, and the **NC LOCK** (normally closed at power on) is connected with '**NC**' and '**COM**' terminals.

Take NC Lock as an example below:

Device not sharing power with the lock

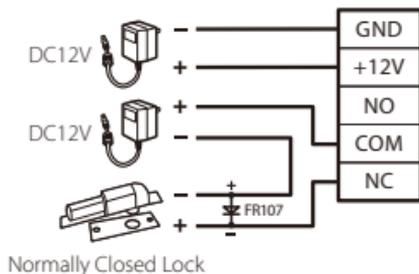

Download Center

Scan the QR Code to download the **User Manual**, **Installation Guide** and **Quick Start Guide**.



ZKTeco Industrial Park, No. 32, Industrial Road,
Tangxia Town, Dongguan, China.

Phone : +86 769 - 82109991

Fax : +86 755 - 89602394

www.zkteco.com

