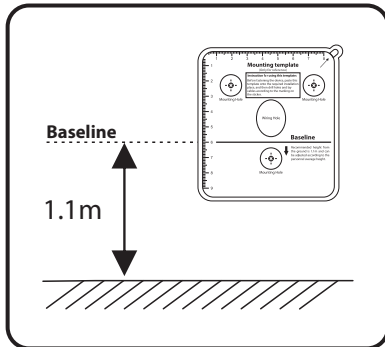



MB20-VL Installation Guide

Version: 1.0


How to install the device?

1


Attach the mounting template sticker to the wall, and drill holes according to the mounting paper.

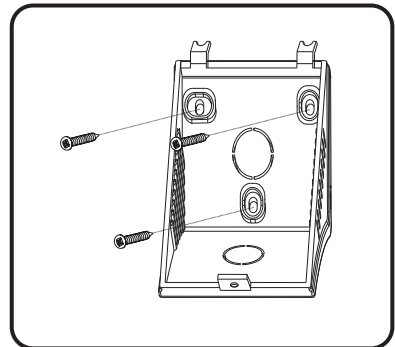2

Fix the back plate on the wall using wall mounting screws.

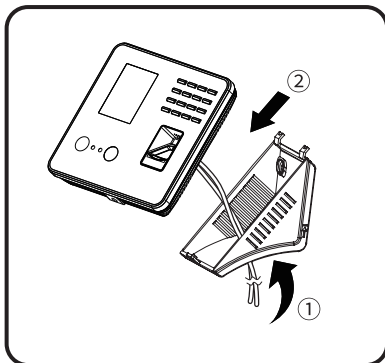3

After passing the wires through the wiring hole and connecting them to the device, and then attach the device to the back plate from top to bottom.

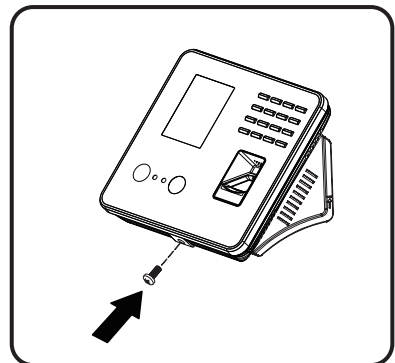4


Fasten the device to the back plate with a security screw.




ZKTECO CO.,LTD. www.zkteco.com Copyright © 2021 ZKTECO CO., LTD. All rights reserved.

ZKTeco Industrial Park, No. 32, Industrial Road, Tangxia Town, Dongguan, China.
Phone: +86 769 - 82109991 Fax: +86 755 - 89602394


Wiring Diagram

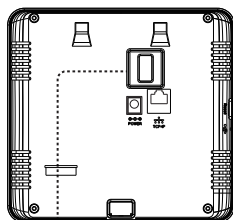

Terminals

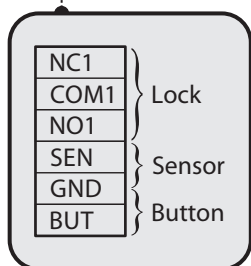


Door Sensor & Exit Button Connection

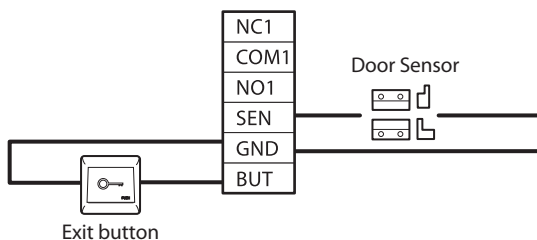


Lock Relay Connection

Not sharing power with the lock

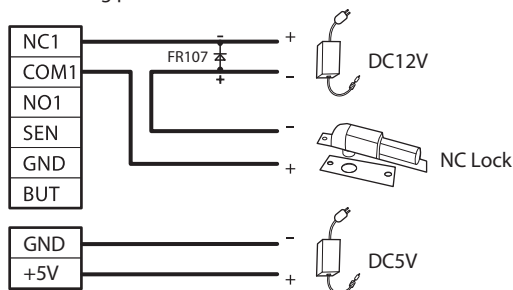


Power Connection

 

1. Recommended AC adapter: **5V, 2A**
2. To share the power with other devices, use an AC adapter with higher current ratings.

Ethernet Connection

 Connect the device and computer software over an Ethernet cable.



Default IP address: 192.168.1.201
Subnet mask: 255.255.255.0

IP address: 192.168.1.130
Subnet mask: 255.255.255.0

Note: In LAN, IP addresses of the server (PC) and the device must be in the same network segment when connecting to ZKBioAccess IVS software. Click on **[Comm.]** > **[Ethernet]** > **[IP Address]**, input the IP address and click on **[OK]**.



Download Center

Scan the QR Code and Download the User Manual, Installation Guide and Quick Start Guide