






Quick Start Guide

SensePalm T1 & SensePalm T2

Version: 1.0






Overview

SensePalm T1

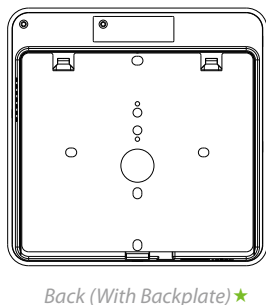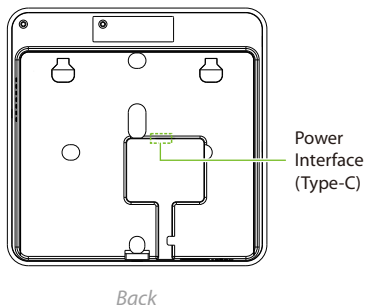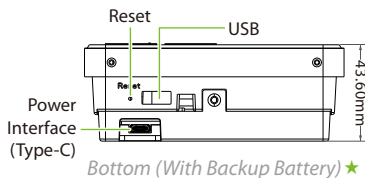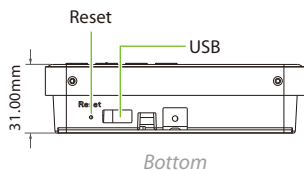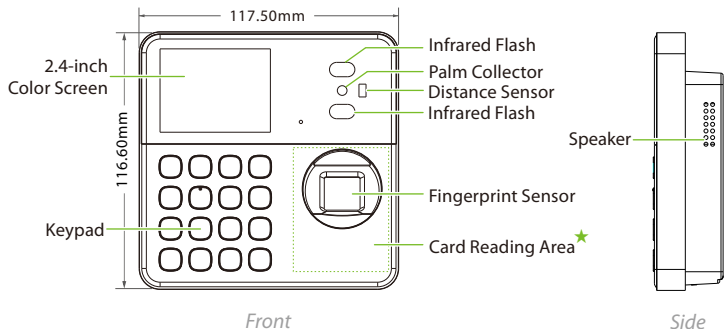

Note: Features and parameters with ★ mark are not available in all devices.

SensePalm T2

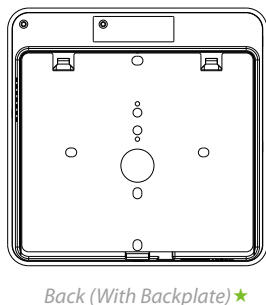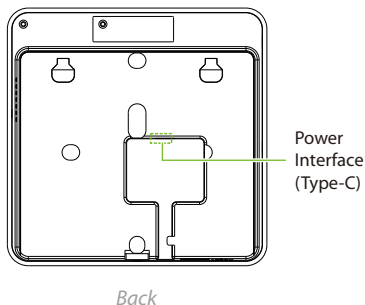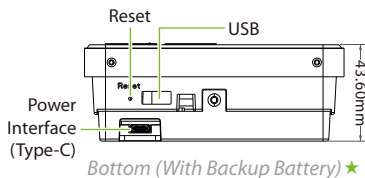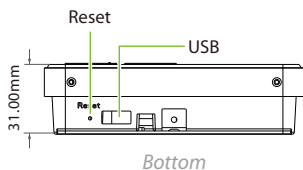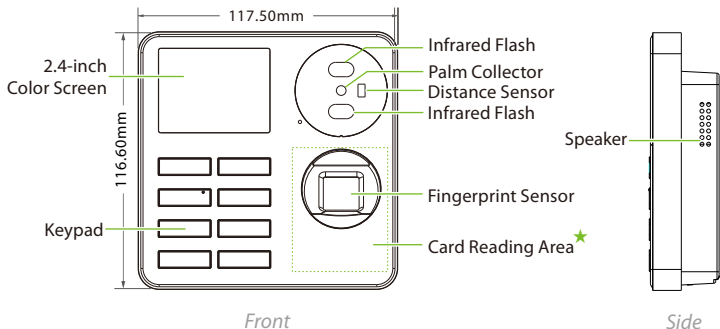

Installation Environment

Please refer to the following recommendations for installation.



INSTALL INDOORS
ONLY



AVOID INSTALLATION
NEAR
GLASS WINDOWS



AVOID DIRECT
SUNLIGHT
AND EXPOSURE




AVOID USE OF ANY
HEAT SOURCE
NEAR THE DEVICE

Device Installation


- Install on the wall (no backplate)

- ① Stick the mounting template sticker to the wall and drill holes according to the mounting template sticker.
- ② Install the wall mounting screws into the holes (**Note:** The screw head should protrude **4~6 mm**).
- ③ Mount the device onto the screws from top to bottom.


①

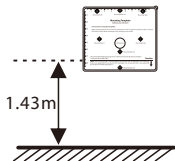


②

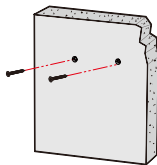

③

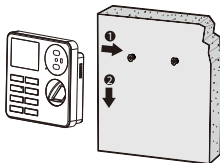


④

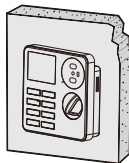


- **Install on the wall (with backplate)** ★

- ① Stick the mounting template sticker to the wall and drill holes according to the mounting template sticker.
- ② Fix the backplate on the wall using wall mounting screws.
- ③ Attach the device to the backplate.
- ④ Fasten the device to the backplate with a security screw.


1

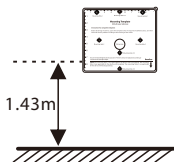


2

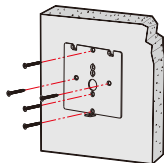

3

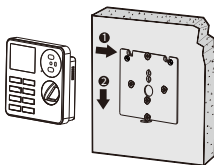


4




- Install on the wall (with backup battery) ★

- ① Stick the mounting template sticker to the wall and drill holes according to the mounting template sticker.
- ② Connect the power cable to the power interface on the back of the backup battery backplate, then fix the backup battery backplate on the wall using wall mounting screws.
- ③ Connect the backup battery's power cable to the device's power interface and attach the device to the backup battery backplate.
- ④ Fasten the device to the backup battery backplate with a security screw.


1

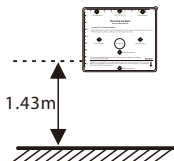

2

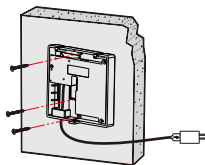

3

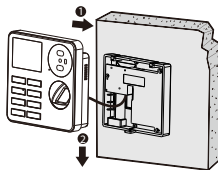

4




Note: You can only choose one between the backplate and the backup battery.


- Install on the desktop (with backplate) ★

- ① Fix the backplate to the Rots-4 desktop stand using two screws.
- ② Attach the device to the backplate.
- ③ Fasten the device to the backplate with a security screw.


①

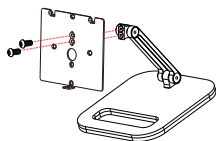

②

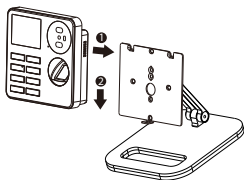


③




- **Install on the desktop (with backup battery) ★**

- ① Fix the backup battery backplate to the Rots-4 desktop stand using two screws.
- ② Connect the backup battery's power cable to the device's power interface and attach the device to the backup battery backplate.
- ③ Fasten the device to the backup battery backplate with a security screw.

①

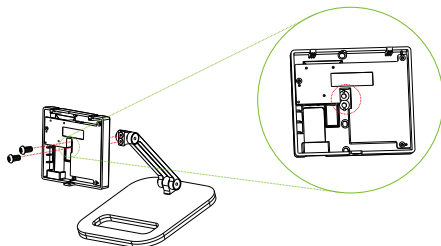


②

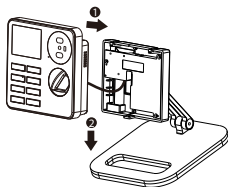

③







Power Connection

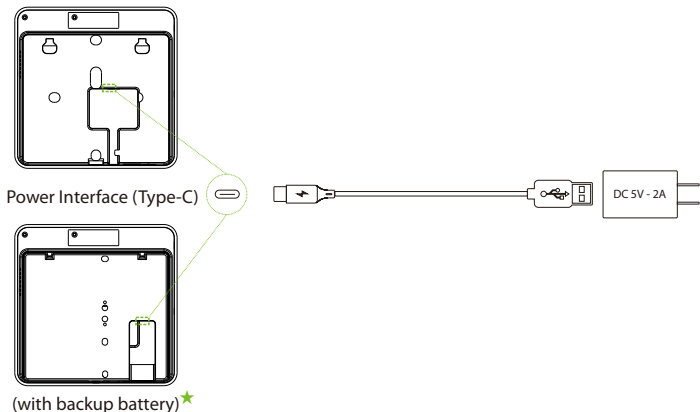

Wi-Fi Connection

After the device is powered on for the first time, press **[M/OK]** to enter the Settings interface. Select **Wi-Fi Settings**, then choose the desired WiFi network from the list and enter the password to connect. If the WiFi connection is successful, the device will prompt "The network setting is successful, please use the App to add a device" and a QR code scanning interface will pop up. Then add the device through the ZKBio Zlink App or ZKBio Zlink Web.

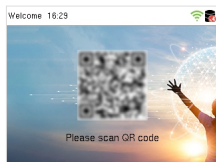
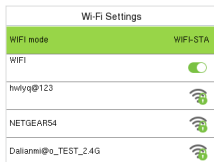
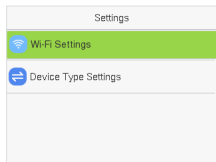


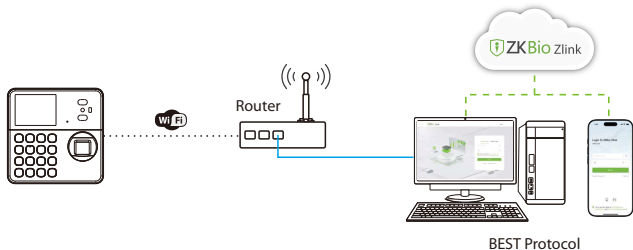

Note: The device type is **BEST Protocol** by default. You can enter [Device Type Settings] to switch to PUSH Protocol to connect to ZKBio CVAccess Attendance Module.

Cloud Server Settings

After switching the device type to PUSH Protocol, then press [M/OK] and enter [COMM.] > [Cloud Server Settings] to set the server address and server port. For example, set the IP address and port number of the server after the software is installed. If the device communicates with the server successfully, the  icon will be displayed in the upper right corner of the standby interface.

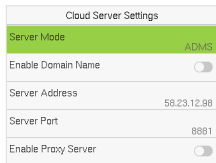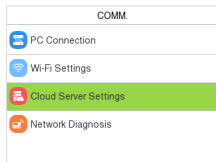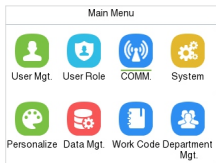

Note:

1) During the process of pairing the device with the ZKBio CVAccess Attendance Module.


Server Address: Set as the IP address of the ZKBio CVAccess server.

Server Port: Set as the Adms service port of ZKBio CVAccess.

2) When the device type is BEST Protocol, you do not need to configure the cloud server settings.


Connect to ZKBio Zlink App

1. Access the ZKBio Zlink App and click on **[Device]** > **+** icon > **[Scan QR Code]** to scan the QR code on the device. Then click **[Next]**.
2. Enter the device name and specify the device to a site. Click **[Complete]** to complete the addition. At the same time, the device voice prompts "**Device is added successfully**".
3. Once successfully added, the device is displayed in the list of the device interface.

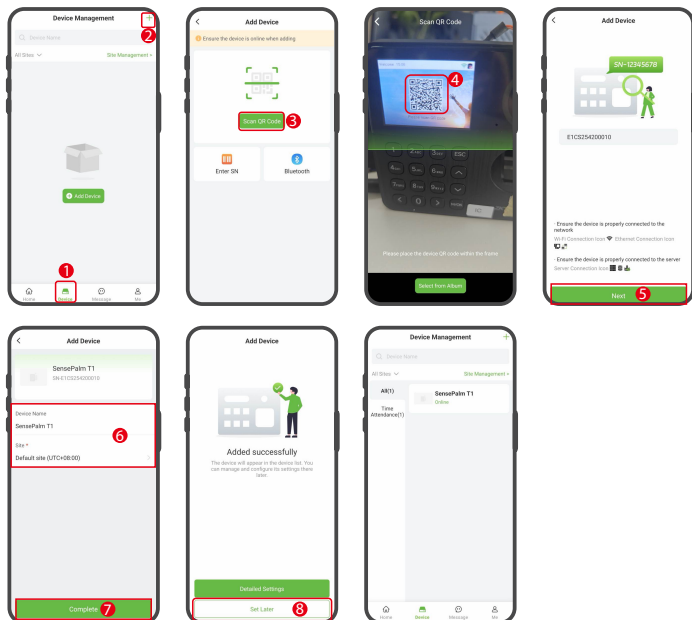


Connect to ZKBio Zlink Web



1. Access the ZKBio Zlink Web and click the  icon on the top left corner, and click **[Device Center] > [Device] > [+Add Device]** to enter the Add Device interface.

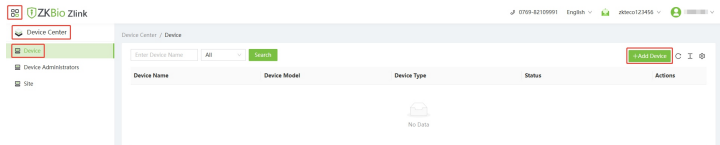

2. Enter the Serial Number of the device and click **[Search]**.

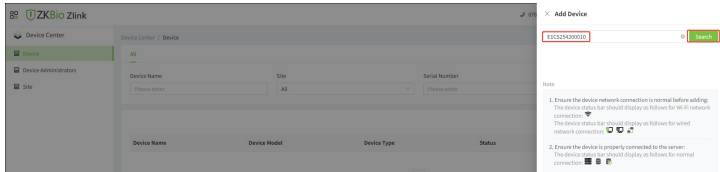

3. Then enter the device name and specify the device to a site. Click **[Save]** to complete the addition.

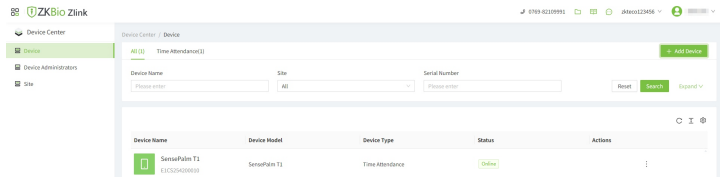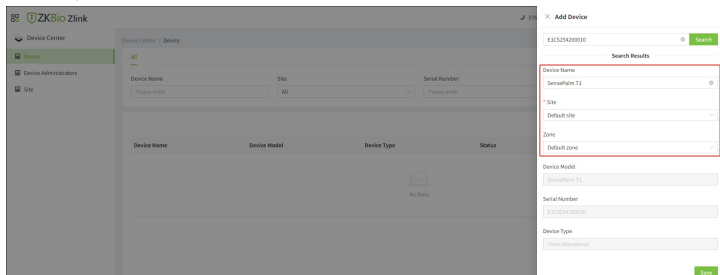

For other specific operations, please refer to the *ZKBio Zlink User Manual*.

Recommended Palm Gestures



KEEP EFFECTIVE
DISTANCE OF
8-15 cm



KEEP SPACES
BETWEEN
YOUR FINGERS



DO NOT KEEP
YOUR FINGERS
CLOSE



DO NOT KEEP
PALM OUTSIDE
COLLECTION AREA



DO NOT KEEP
YOUR FINGERS
FOLD/CURLED

Note:

1. Place your palm within **8-15 cm** of the device.
2. Place your palm in the palm collection area, such that the palm is placed parallel to the device.
3. Make sure to keep space between your fingers.

ZKTeco Industrial Park, No. 32, Industrial Road,
Tangxia Town, Dongguan, China.

Phone : +86 769 - 82109991

Fax : +86 755 - 89602394

www.zkteco.com

